

Post-It® Fax Note	7671	Date	0 o(≥
*Jace		From	
Co/Dept.		Co.	
Phone #		Phuse 8	
Fax #		Fax e	

Setting the TOP OF FORM (TOF) and FORMS TEAR-OFF Position

Product:

ML320Turbo, ML320Turbo-D, ML321Turbo, ML321Turbo-D, ML390Turbo, ML391Turbo, ML520, ML521, ML590, ML591

Document Visibility:

Document Number:

1846

🔯 Businesa Partnera 🔯 End Usars

Date last Updatedt:

10/25/2001

OKI Corporate

Support Vendors

End User Communication

How To:

Set the top of form (TQE) to insure proper print start position and proper paper tear position.

Note1 - Your software may be printing the first line of print above or below where TOF is set. You may need to use the instructions below to Re-adjust according to your software's needs.

Note2 - DO NOT TURN PLATEN KNOB ON RIGHT HAND SIDE OF PRINTER. Doing this will always change the TOF setting. If you must use it for removing paper jams or to move the paper, be sure the power to the printer is off.

Action:

Checking to see if Forms Tear off is "ON" or "OFF".

Before setting the Top of Form you need to verify what the Forms Tear Off is set for.

- Load Paper.
- 2. Press TEAR.
- If the paper moves up then Forms Tear Off is "OFF". If the paper moves down then Forms Tear Off is "ON".

SETTING TOP OF FORM AND TEAR OFF POSITION WHEN THE TEAR-OFF FEATURE IN THE MENU IS ON:

Turn printer ON. Park the paper. With paper out of the unit, (red alarm light should be on) press shift and hold press and quiet to reset the current TOE Press 5 + im rs

Load the paper. (Press FF/Load)

. Press the SELECT button to take the printer off-line. The select light goes out.

. Wait until the paper moves up to the Tear position and then press and hold the TEAR button (Paper will go to


current TOF) -- Keep holding this button.

Press and hold the SHIFT button and release the TEAR button.

As you continue to hold the SHIFT button, press the MICROFEED UP or MICROFEED DOWN button, depending

on which direction you want to move the paper to slign TOF

Note: the first line will begin printing at the red line of the plastic shield on the printhead.

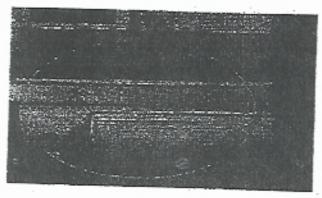

When TOF is at the correct position, release ALL buttons. Press the SELECT button to re-select printer.

SETTING THE TOF WITH THE FORMS TEAR OFF FEATURE OFF IN THE PRINTER'S MENU:

Turn printer ON.

Press the Select button to take the printer off-line, select light goes out.

 Press the SHIFT button and continue holding the SHIFT button, press the MICROFEED UP or MICROFEED DOWN button, depending on which direction you want to move the paper to align TOF position.

. Release all buttons and Re-select printer.

Reminder: Never move the paper position using the platen knob because the printer will not know the paper has been moved and lose Top of Form. The TOF can be reset back to factory default by pressing the QUIET/TOF button with paper out of the printer, or by powering on the printer while holding the QUIET/TOF + PARK buttons.

EU How To - INT

		THE RESERVE OF THE PERSON NAMED IN
Instaltition and Setup	How To	-

Emulation Mode ML Print Mode DRAFT DRAFT Mode SSD Pitch 17.1 CPI Proportional Spacing No Style Normal Size Single Character Set Standard & Language Set American Zero Character Unslashed Code Page USA Line Spacing 6 LPI Form Tear-Off 23Y an Skip Over Perforation # 8,5 Page Length . Line Spacing 6 LPI Form Tear-Off Off Skip Over Perforation Nο 11 " Page Length Line Spacing 6 LPI Bottom Margin Valid Page Length 11 " Wait Time 1 sec Page Length Control by Actual Page Length Graphics Uni-directional 7 or 8 Bits Graphics Receive Buffer Size 64K Paper Out Override No Print Registration 0 SET |||||| SHIFT+SET 7 or 8 Bits Data Word 7 Operator Panel Function Full Operation Reset Inhibit Print Suppress Effective Yes Auto LF No Print DEL Code Nο Time Out Print Valid Auto Select Centering Position DEFAULT I-Prime Buffer Print Pin 18 Bi-Direction Enable Parity None Serial Data 7/8 Bits 8 Bits Protocol Ready/Busy Diagnostic Test No Busy Line SSD-Baud Rate 9600 BPS DSR Signal Invalid DTR Signal Ready on Power UP Busy Time 200 as

1

rol